

PX-8

OS Reference Manual

Trademark Acknowledgments

CP/M™ is a trademark of Digital Research, Inc.

MICROCASSETTE™ is a trademark of OLYMPUS OPTICAL CO.,
LTD.

NOTICE

- * All rights reserved. Reproduction of any part of this manual in any form whatsoever without EPSON's express written permission is forbidden.
- * The contents of this manual are subject to change without notice.
- * All efforts have been made to ensure the accuracy of the contents of this manual. However, should any errors be detected, EPSON would greatly appreciate being informed of them.
- * The above notwithstanding, EPSON can assume no responsibility for any errors in this manual or their consequences.

© Copyright 1985 by EPSON CORPORATION.
Nagano, Japan

CONTENTS

Chapter 1.	Introduction	1-1
1.1	Purpose of This Manual	1-1
1.2	Before Reading This Manual	1-2
Chapter 2.	General Description and System Configuration	2-1
2.1	MAPLE System Configuration	2-1
2.2	Hardware Configuration	2-3
2.2.1	Hardware Configuration (see block diagram)	2-3
2.2.2	Built-in I/O Devices	2-7
2.2.3	External Interfaces	2-10
2.3	Software Features and Organization	2-17
2.3.1	Software Features	2-17
2.3.2	Software Organization	2-28
2.4	MAPLE State Transition	2-31
Chapter 3.	MAPLE CP/M Principles of Operation	3-1
3.1	CP/M Memory Organization	3-1
3.1.1	Roles of CP/M Modules in ROM and RAM	3-1
3.1.2	Procedure for Constructing a CP/M System in RAM	3-5
3.2	BDOS Function Processing Flow	3-11
3.3	BDOS Error Recovery Procedure	3-12
3.3.1	Receiving BDOS Error Information in Return Code	3-13
3.3.2	Rewriting the Jump Vector for Processing BDOS Errors	3-17
3.4	BIOS Function Operation Flow	3-19

Chapter 4.	BIOS Subroutines	4-1
Chapter 5.	Keyboard	5-1
5.1	General	5-1
5.2	Keys and Keyboard Types	5-1
5.3	OS Key Routine Functions	5-5
5.4	Operation Flow	5-6
5.5	Keyboard States	5-10
5.5.1	Keyboard Mode Transition	5-10
5.5.2	Keyboard State Transition	5-12
5.6	Special Keys	5-15
Chapter 6.	CONOUT	6-1
6.1	Outline	6-1
6.2	Screen Configuration	6-2
6.3	Screen Modes	6-4
6.4	Special Screen Features	6-15
6.5	How to Use CONOUT	6-19
6.6	CONOUT Functions	6-19
Chapter 7.	System Functions	7-1
7.1	Password	7-2
7.2	Auto Start String	7-3
7.3	Menu	7-6
7.4	Resident	7-10
7.5	System Display	7-12
7.5.1	Password	7-13
7.5.2	Alarm/Wake	7-13

7.5.3	Auto Start String	7-14
7.5.4	Menu	7-14
7.5.5	MCT	7-14
7.5.6	Manual MCT Operation	7-17
7.5.7	Other Information Displayed by System Display Function	7-21
7.6	Auto Power Off	7-22
Chapter 8.	Alarm/Wake Feature	8-1
8.1	General	8-1
8.2	Alarm Function	8-2
8.3	Wake1 Function	8-4
8.4	Wake2 Function	8-6
8.5	Alarm/Wake Function Processing Flow	8-13
8.6	How to Augment the Alarm/Wake Functions Using Hooks	8-19
8.7	Making Alarm/Wake Settings Directly for 7508	8-24
8.8	Relationship to BIOS	8-28
8.9	Method of Inhibiting Alarm Message Display from Application Program	8-31
8.10	How to Disable System Display Function for Displaying Alarm/Wake Message	8-33
8.11	Precautions on the Use of the Alarm/Wake Functions	8-34
Chapter 9.	Power On/Off Function	9-1
9.1	Power-on Sequences	9-2
9.2	Software-driven Power-on Sequence	9-6
9.3	Power-off Sequence	9-7

9.4	Power Fail Sequence	9-11
9.5	Software-activated Power-Off	9-13
9.6	Turning Power Off Always in the Continue Mode	9-14
9.7	Changing the Key for Specifying the Continue Mode	9-15
9.8	Relationship between Power-off Interrupts and BIOS	9-16
9.9	Method of Inhibiting Power-off Sequence from Application Program	9-19
Chapter 10.	Interrupt Processing	10-1
10.1	Interrupt Levels	10-1
10.2	Interrupt Processing	10-2
10.3	7508 Interrupts	10-9
10.4	8251 Interrupts	10-12
10.5	CD Interrupts	10-14
10.6	OVF Interrupts	10-17
10.7	ICF Interrupts	10-19
10.8	EXT Interrupts	10-23
10.9	Procedure for Modifying Interrupt Vectors .	10-25
10.10	Programming Notes on Interrupt Processing .	10-26
Chapter 11.	7508 CPU	11-1
11.1	7508 CPU Functions	11-1
11.2	Interface to Z80	11-3
11.3	7508 Commands	11-7
Chapter 12.	Using 8251A Programmable Serial Controller	12-1

12.1	Interface between the Z80 and the 8251A ...	12-1
12.2	Controlling the 8251A Transmitter/ Receiver Clocks	12-2
Chapter 13.	6301 Slave CPU Operations	13-1
13.1	Functions	13-1
13.2	Data Backup	13-10
13.3	Z80-to-slave-CPU Communication Procedure ..	13-11
13.4	Slave CPU Commands	13-13
Chapter 14.	MTOS/MIOS Operations	14-1
14.1	MTOS/MIOS	14-1
14.1.1	MTOS/MIOS Outline	14-1
14.1.2	File Control	14-5
14.1.3	Tape File Control Block (T-FCB)	14-14
14.1.4	MTOS Programming Considerations	14-17
14.1.5	Miscellaneous Considerations on MTOS	14-21
14.2	Using MTOS	14-32
14.3	MTOS Functions	14-33
14.3.1	BDOS calls	14-35
14.3.2	Return Codes from MTOS	14-67
14.4	Using MIOS	14-73
14.5	MIOS Functions	14-75
Chapter 15.	I/O and Peripheral Devices	15-1
15.1	I/O Address Space	15-2
15.2	Physical File Structure	15-21
15.3	EPSP Protocol	15-34
15.4	DIP Switches	15-42

Chapter 16.	Extension Units	16-1
16.1	Nonintelligent RAM Disk Unit	16-2
16.2	Intelligent RAM Disk Unit	16-9
16.3	Direct Modem Unit	16-25
16.4	Multi-Unit 64	16-47
16.5	Multi-Unit II	16-53
Chapter 17.	How to Use User BIOS Area	17-1
17.1	Outline	17-1
17.2	User BIOS Area Specifications	17-2
17.3	Programming Notes on the Use of the User BIOS Area	17-4
Chapter 18.	Memory Maps	18-1
18.1	OS ROM Memory Map	18-1
18.2	RAM Memory Map	18-3
Chapter 19.	Application Notes	19-1
19.1	FILINK Communications Protocol	19-3
19.2	Procedure for Calling BDOS and BIOS Directly from BASIC	19-7
19.2.1	Calling BDOS	19-7
19.2.2	Calling BIOS	19-9
19.3	Procedure for Determining the Type and Size of RAM Disk	19-10
19.4	CG Fonts	19-12
19.5	Procedure for Identifying the OS Version from an Application Program	19-14
19.6	Procedure for Checking the Data Received by CCP from an Application Program	19-17

19.7	Procedure for Detecting the Depression of the CTRL/STOP Keys	19-18
19.8	Procedure for Assigning Printer Output to RS-232C or Serial Interface	19-20
19.9	Procedure for Restoring the Screen into the State Set up by CONFIG	19-21
19.10	Procedure for Configuring the System Environment from an Application Program ...	19-24
19.10.1	Auto Power Off (common to both overseas and Japanese-language versions)	19-24
19.10.2	CP/M Function Key (common to both overseas and Japanese-language versions) ..	19-24
19.10.3	Cursor & Function Key Display (common to both overseas and Japanese-language versions)	19-24
19.10.4	Date and Time (common to both overseas and Japanese-language versions)	19-28
19.10.5	Disk Drives (common to both overseas and Japanese-language versions)	19-28
19.10.6	Printer (common to both overseas and Japanese-language versions)	19-30
19.10.7	RS-232C (RS-232C (1) for Japanese-language version)	19-31
19.10.8	Screen mode (common to both overseas and Japanese-language versions)	19-31
19.10.9	Serial (common to both overseas and Japanese-language versions)	19-35
19.11	XON/XOFF Control for the Currently Open RS-232C Interface	19-37
19.12	Procedure for Sending and Detecting the RS-232C Break Signal	19-38
19.12.1	Sending the RS-232C Break Signal	19-38
19.12.2	Detecting the RS-232C Break Signal	19-38